
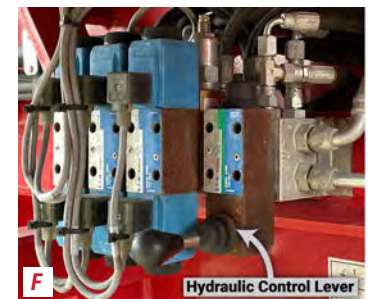
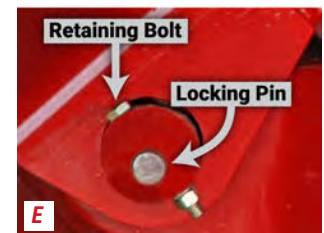


Always ensure proper safety protocol is followed and appropriate PPE is worn.

- 1 Park on the most level solid ground possible, place wheel chocks on wheels.
- 2 Remove any binding holding the tracks during transport.
- 3 Close the tank valve on the dolly rear tank.
- 4 Open air bag valve, this will dump the dolly air bags.  
*See Figure A*
- 5 Disconnect light and air lines from dolly to machine. Do not hook lines up to dolly air ports at this time.  
*See Figures B & C*
- 6 Start the machine.
- 7 Remove the landing gear pins on both sides of the grinder and lower the landing gear to support the front of the machine. Disconnect the semi-truck from the machine, park out of the way. Raise landing gear all the way up and install landing gear pins.  
*See Figure D*
- 8 Remove the retaining bolts from the locking pins on both sides of the horizontal grinder.  
*See Figure E*
- 9 Using the hydraulic control lever located under radiator, retract the locking pins fully.  
*See Figure F*
- 10 Switch the machine to dolly mode.  
*See Figure G*
- 11 Using the wireless remote or the tether remote, track the grinder straight off the dolly.
- 12 Make sure to clear the dolly all the way before switching off of dolly mode.

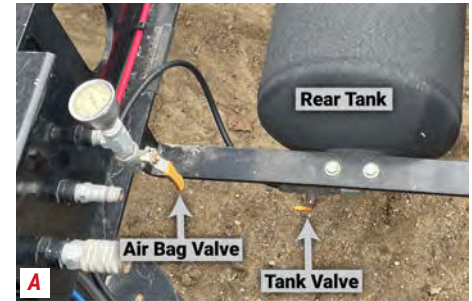

FOR CONNECTIVITY OR TRANSFER INSTRUCTIONS, SEE ADDITIONAL ROTOCHOPPER UNIVERSITY CONTENT.